



STEP 1

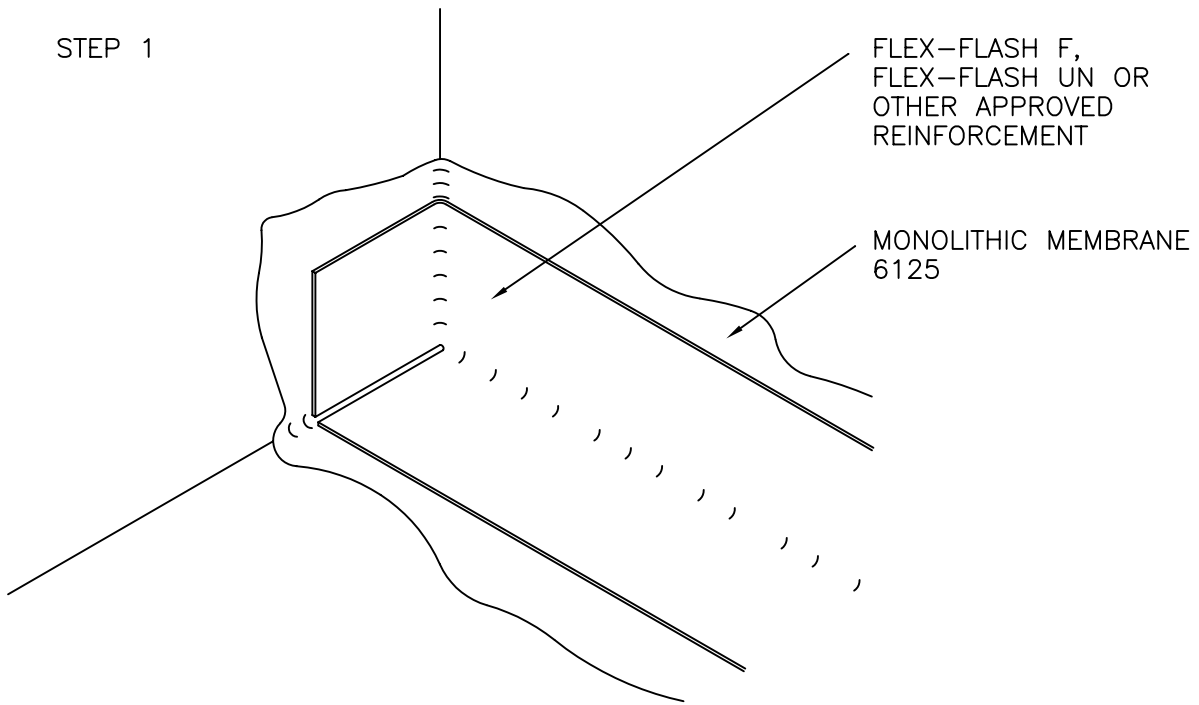

STEP 2

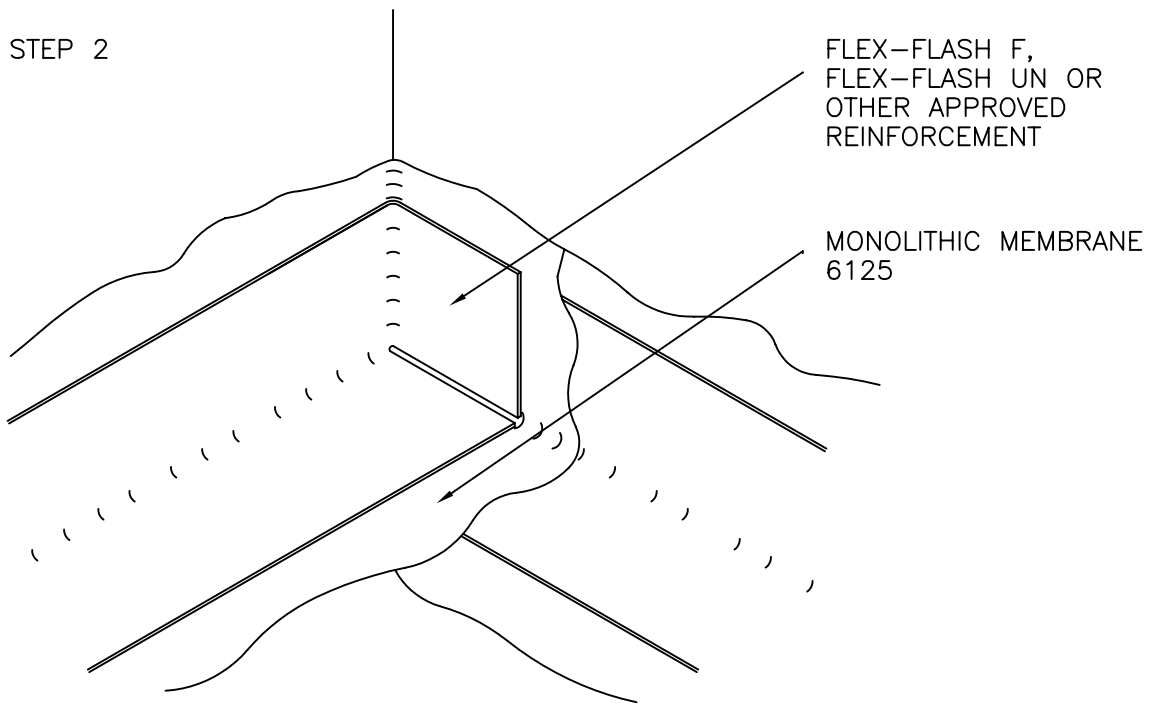

STEP 3

COMPLETELY ENCAPSULATE ALL EXPOSED REINFORCING WITH A TOP COATING OF MONOLITHIC MEMBRANE 6125. NO REINFORCING SHOULD BE LEFT EXPOSED OVERNIGHT.



Monolithic Membrane
6125
WATERPROOFING SYSTEMS

AMERICAN HYDROTECH, INC.

INSIDE CORNER
REINFORCEMENT

NO SCALE

W-13A